


Measuring for Vertical Blinds blinds.

Recess measurement.

- Take 3 measurements for the width of the window recess as shown in the picture.
 - Take the smallest of these measurements. This is the recess width.
- We will make the necessary deductions for the fittings & brackets to ensure the blind operates perfectly within the window recess.

- Take 3 measurements for the drop of the window recess as shown in the picture.
 - Take the smallest of these measurements. This is the recess drop.
- We will make the necessary deductions for the fittings & brackets to ensure the blind operates perfectly within the window recess.

PLEASE NOTE; that the complete size of the blind includes the headrail and all the brackets etc.

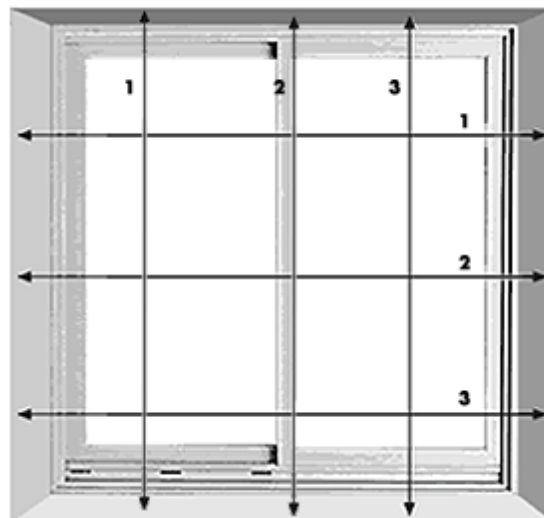

Exact Blind Measurement

Used when the vertical blind is to be fitted outside the window recess.

Decide how much you wish to overlap the recess at each side.

Take the overall width measurement including the overlap. This is the Exact Blind size, please note the width of your blind will be the size of the headrail and the drop will be from the top of the headrail to the bottom of the slats we will make no deductions. Exact blind size can also be if you have measured the width of an old headrail and the drop from the top of the headrail to the bottom of the slats.