


Measuring for Wooden Blinds blinds.

Recess measurement.

- Take 3 measurements for the width of the window recess as shown in the picture.
 - Take the smallest of these measurements. This is the recess width.
- We will make the necessary deductions for the fittings & brackets to ensure the blind operates perfectly within the window recess.

- Take 3 measurements for the drop of the window recess as shown in the picture.
 - Take the smallest of these measurements. This is the recess drop.
- We will make the necessary deductions for the fittings & brackets to ensure the blind operates perfectly within the window recess.

PLEASE NOTE; we will not make any deductions from the drop on a sunwood blind as the headrail is included.

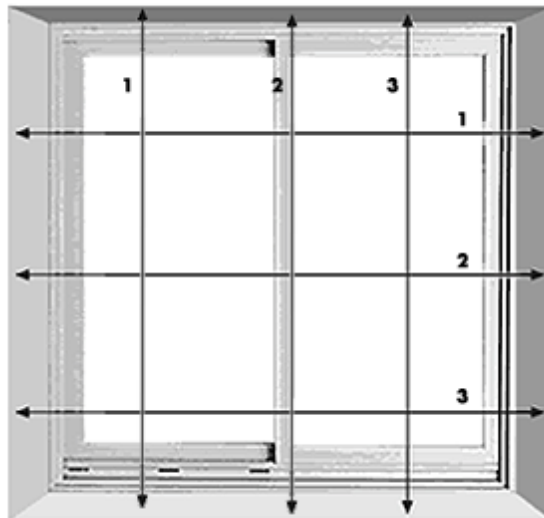

Exact Blind Measurement

Used when the wooden blind is to be fitted outside the window recess.

Decide how much you wish to overlap the recess at each side.

We would recommend

70mm at the top and 50mm each side to minimize light. We will not make any deductions off the sizes given for an exact size for a wooden blind.