

HOW TO MEASURE FOR WOODEN BLINDS

WHAT YOU NEED

- Pencil
- Note pad
- A metal tape measure




Recess Measurement

- Take 3 measurements for the width of the window recess as shown in the picture.
- Take the smallest of these measurements. This is the recess width.
- We will make the necessary deductions (12mm) to allow for the fittings & brackets to ensure the blind operates perfectly within the window recess.
- Take 3 measurements for the drop of the window recess as shown in the picture.
- Take the smallest of these measurements. This is the recess drop.
- We will make the necessary deductions for the fittings & brackets to ensure the blind operates perfectly within the window recess.

PLEASE NOTE:

We will not make any deductions from the drop on a sunwood blind as the headrail is included.

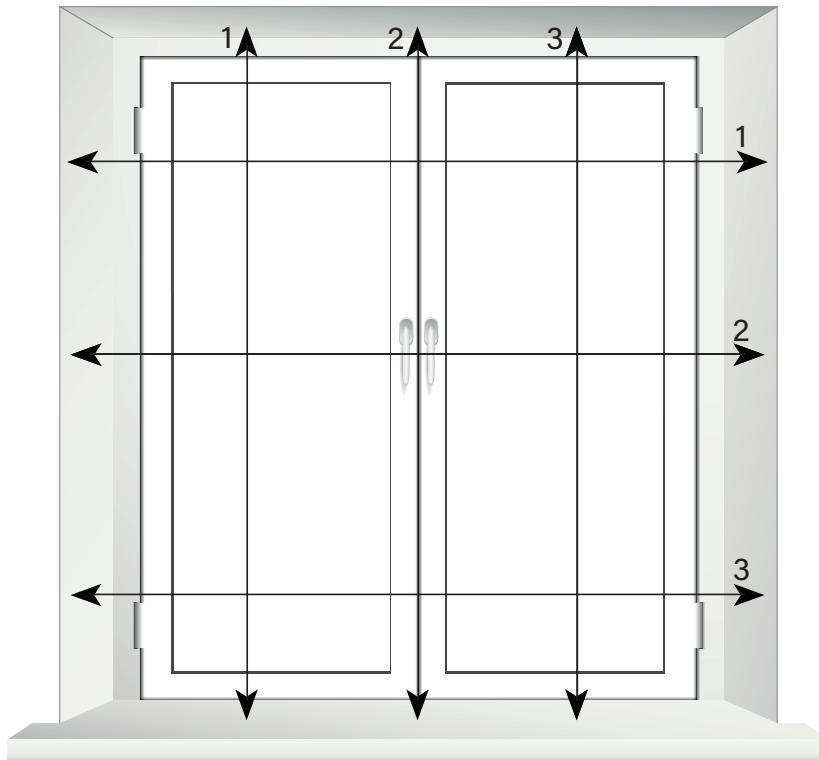

Exact Blind Measurement

- Used when the wooden blind is to be fitted outside the window recess.
- Decide how much you wish to overlap the recess at each side.
- We would recommend 70mm at the top and 50mm each side to minimize light.
- We will not make any deductions off the sizes given for an exact size for a wooden blind.